ARTOME X20
Quick User Guide

A

B

C

1

- Open the door by pressing the upper right corner (image A)

2

- Feed the **HDMI-USB** cable through the inlet and connect the cable to the Artome **HDMI** and **ARTOME +** connectors (image B)
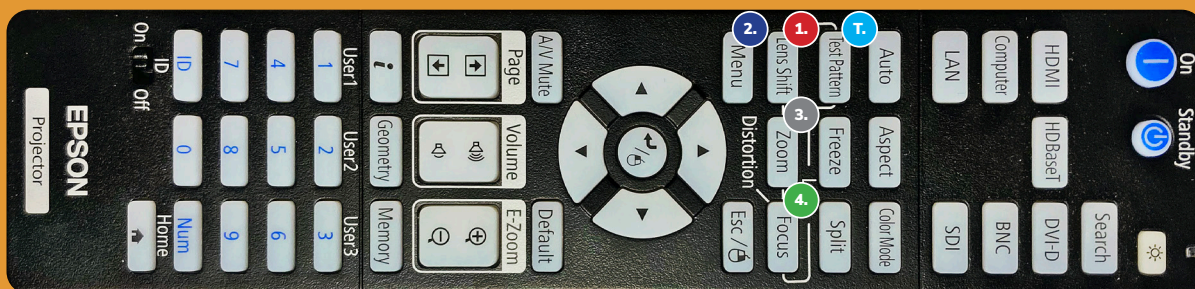
3

- Connect HDMI-USB cable to your computer HDMI and USB A-ports. Use adapter if necessary. (image C)

4

- Power on the Artome by pressing the **POWER** button on the control panel

Image adjustment

T. Test Pattern

Select the Test Pattern mode and adjust the image with phases 1-4.

1. Lens shift

Adjusts the image position horizontally and vertically

2. Menu / Settings / Geometry Correction / H/V-keystone

V-keystone:
Adjusts the tilt angle of the image
(compare that the vertical edges are straight)

V-balance:
Adjusts the image height
(compare that the circular shapes of the
Test Pattern are symmetrical)

3. Zoom

Adjusts the image size

4. Focus

Adjusts the image focus

TEHTY SUOMESSA
MADE IN FINLAND

ARTOME

Control panel

PAUSE   VOLUME +   SOURCE

FREEZE   VOLUME –   POWER

ARTOME

PAUSE
Turns off the image and the sound
• image and sound restores by pressing again

FREEZE
Freezes the image, but not the sound

VOL +/-
Adjusts the volume

SOURCE
Selects the source between connected devices

POWER
Turns the device on and off

USB
Connection for USB camera

Connections

ARTOME

AUDIO OUT L   AUDIO OUT R   MIC 1   MIC 2   16 A   POWER

HDBaseT   HDMI   ARTOME +   USB

100-240V~ 3A 50/60Hz   5V⎓1A   5V⎓1A   100-240V~ 16A 50/60Hz   100-240V~ 3A 50/60Hz

SUPPORT: +358 40 455 4455

⚠ CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN ⚠

AUDIO OUT L & R
Audio output
for external speakers
• *balanced stereo 0 dBV*

MIC 1 & 2
Connection for a wired microphone
or a wireless microphone receiver

HDBaseT
Audio and video input

HDMI
Audio and video input

ARTOME+
Interface between video conferencing
devices and a computer

USB
Connection for additional devices
e.g. a wireless desktop microphone
receiver

Power
Connection for the mains
power of the device

contact@artome.fi | www.artome.fi
Artome support: +358 40 455 4455

TEHTY SUOMESSA
MADE IN FINLAND

ARTOME